


HALT SLIM

TAG APPLICATION AND REMOVAL

Attaching Halt Slim

1. Slide the metal shackle through the top outer eyelet or loop on the shoe where the tag will be secured.
2. Once the shackle is in place, align it with the hole in the base of the Halt Slim tag.
3. Press the metal shackle down into the hole until it clicks into place. Ensure the tag is securely fastened and does not shift or pull loose.

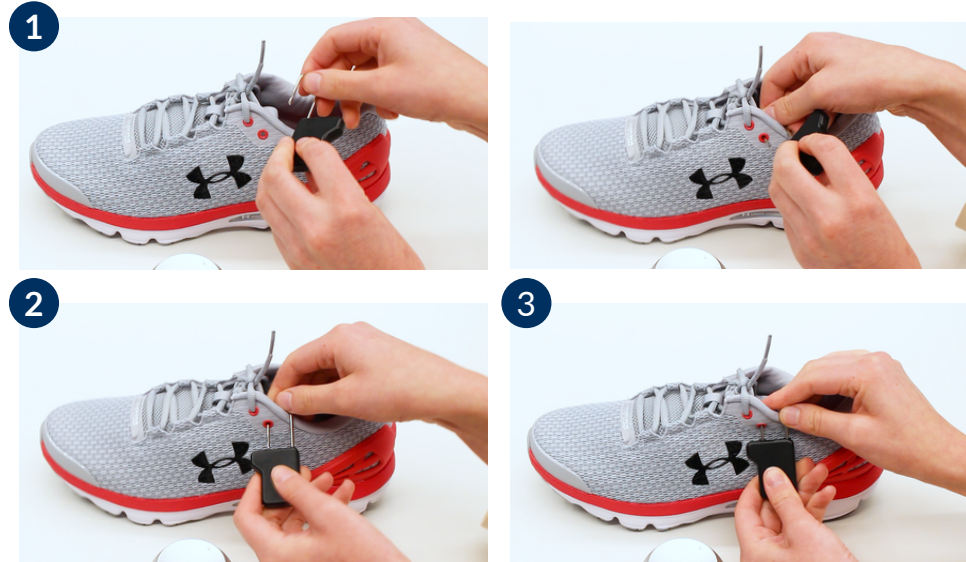

HALT SLIM

Removing Halt Slim

1. Tap the extended side of the tag firmly against the detacher to release the internal lock mechanism.
2. While the tag is on the detacher **press down** on the metal shackle.
3. The metal shackle will pop up.
4. Slide the tag out from the eyelet or loop on the footwear.



Scan to watch
the video

HALT SLIM

APPROVED TAG PLACEMENT

Approved Tag Placements for Applying the HALT Slim

For optimal security and performance, please apply the HALT Slim tag using one of the following approved placements on Under Armour footwear:

1. Top Eyelet - Thread the tag securely through the top eyelet of the shoe.
2. Top Lace Loop - If the shoe features a lace loop, affix the tag through the top lace loop.
3. Front Lower Wire - If no eyelets or loops are present, use the front lower lace cable area to attach the tag.

Always ensure the tag is tightly secured to prevent easy removal or tampering.

